


SPIDER

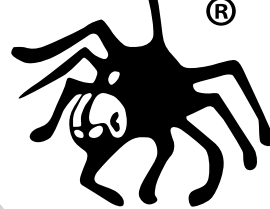



PEDANA - REARSET


**DUCATI V2
10.D252**

Made in Italy


Num. articolo	Num. parte	Quantità
1	10.D252.2R - PIASTRA DX DUCATI V2 2022	1
2	10.D252.62 - LEVA FRENO DUCATI V2 2022	1
3	pompa freno v3	1
4	11.U7.1 CUSCINETTO Ø21 H5	2
5	11.8.2 - BOCCOLA INOX ESTERNA LEVE SPIDER	1
6	11.8.1 - BOCCOLA INOX INTERNA LEVE SPIDER	1
7	11.39.3 - UNIBAL M6F	1
8	11.14.2 PERNO MOLLA 20mm	1
9	11.14.1 PERNO MOLLA 8mm	1
10	molla 50mm	1
11	10.D252.58R - TRIPODE DX DUCATI V2 2022	1
12	11.27 - PEDALE A VITE ESTERNA	1
13	M8 x 25 TCEI	4
14	11.U65R	1
15	M6 x 20 TCEI	1
16	M8 X 30 TCBEI	1
17	10.D252.A2 - PARATACCO DX DUCATI V2 2022 2	1
18	GRANO M6X40mm - 8.8 - UNI5923	1
19	DADO M6 - 8.8 - UNI5589	2
20	DADO M6 AUTOBLOCCANTE	2
21	M6 X 12 TCBEI	1
22	11.15.1 BOCCOLA Distanziale PEDALE 10MM	1
23	M8 x 35 TCEI	1
24	M6 X 35 TCBEI	2
25	11.12.1 - PERNO FRENO 70MM	1
26	11.16 - TAPPO DERLIN PEDALE POGGIPIEDE M6X20 TESTA ESAGONALE - ISO 4017	1
27		1

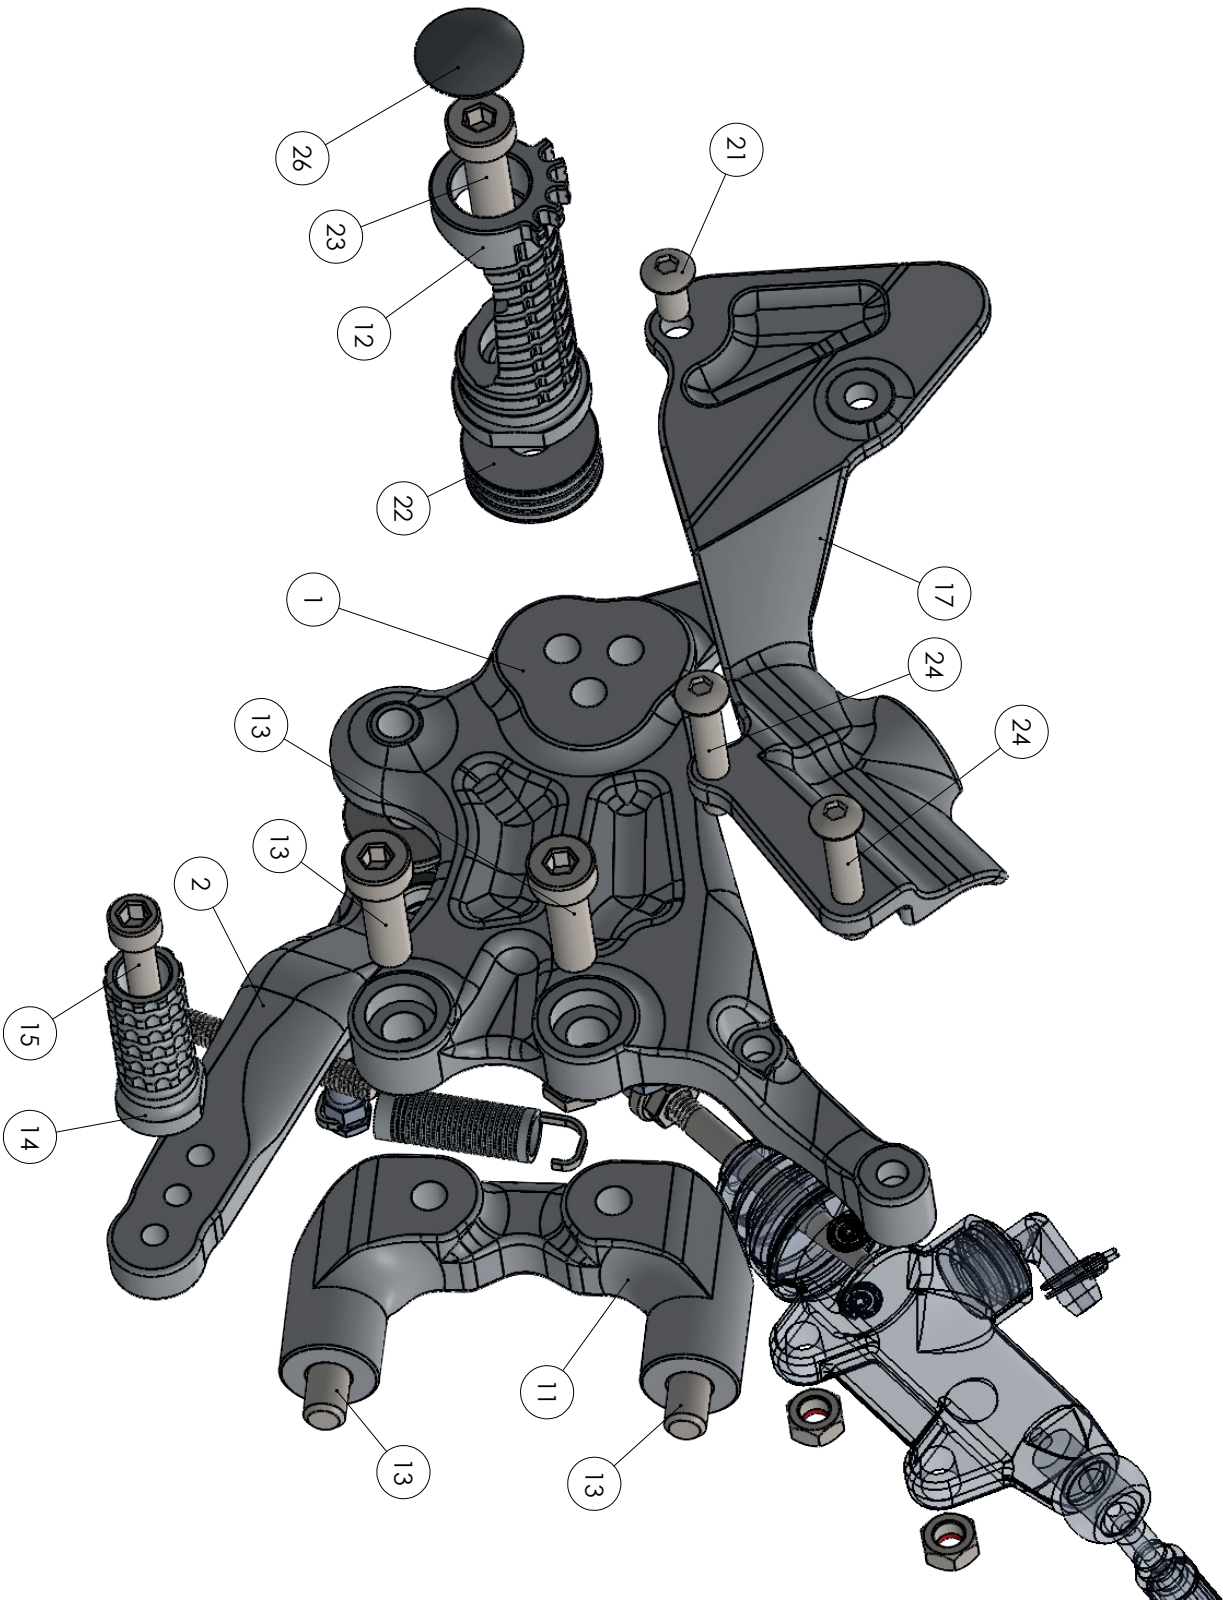

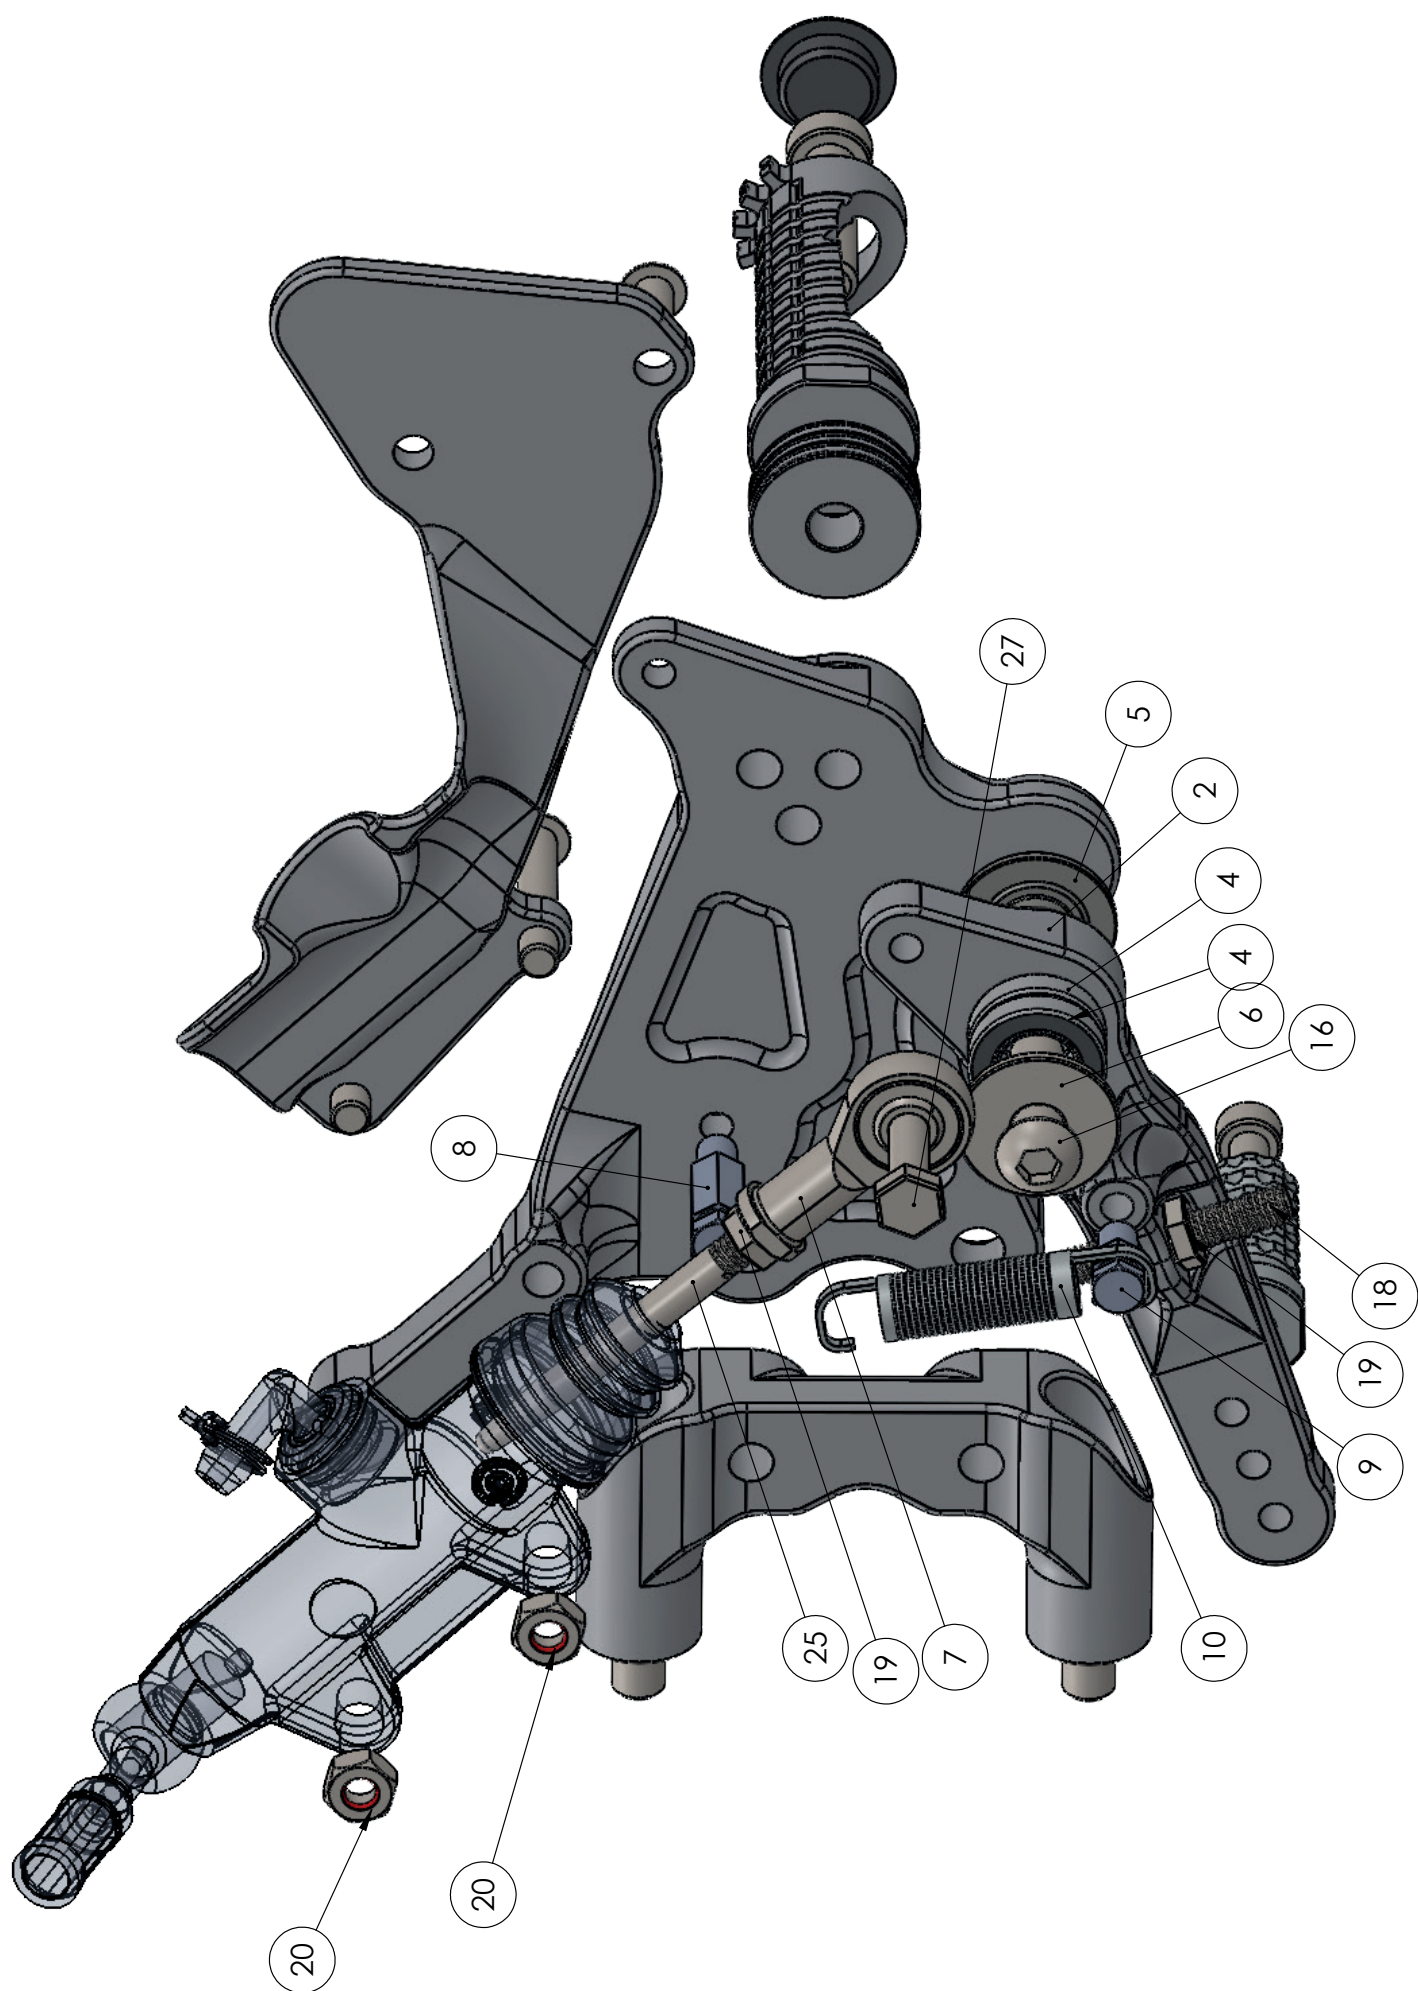

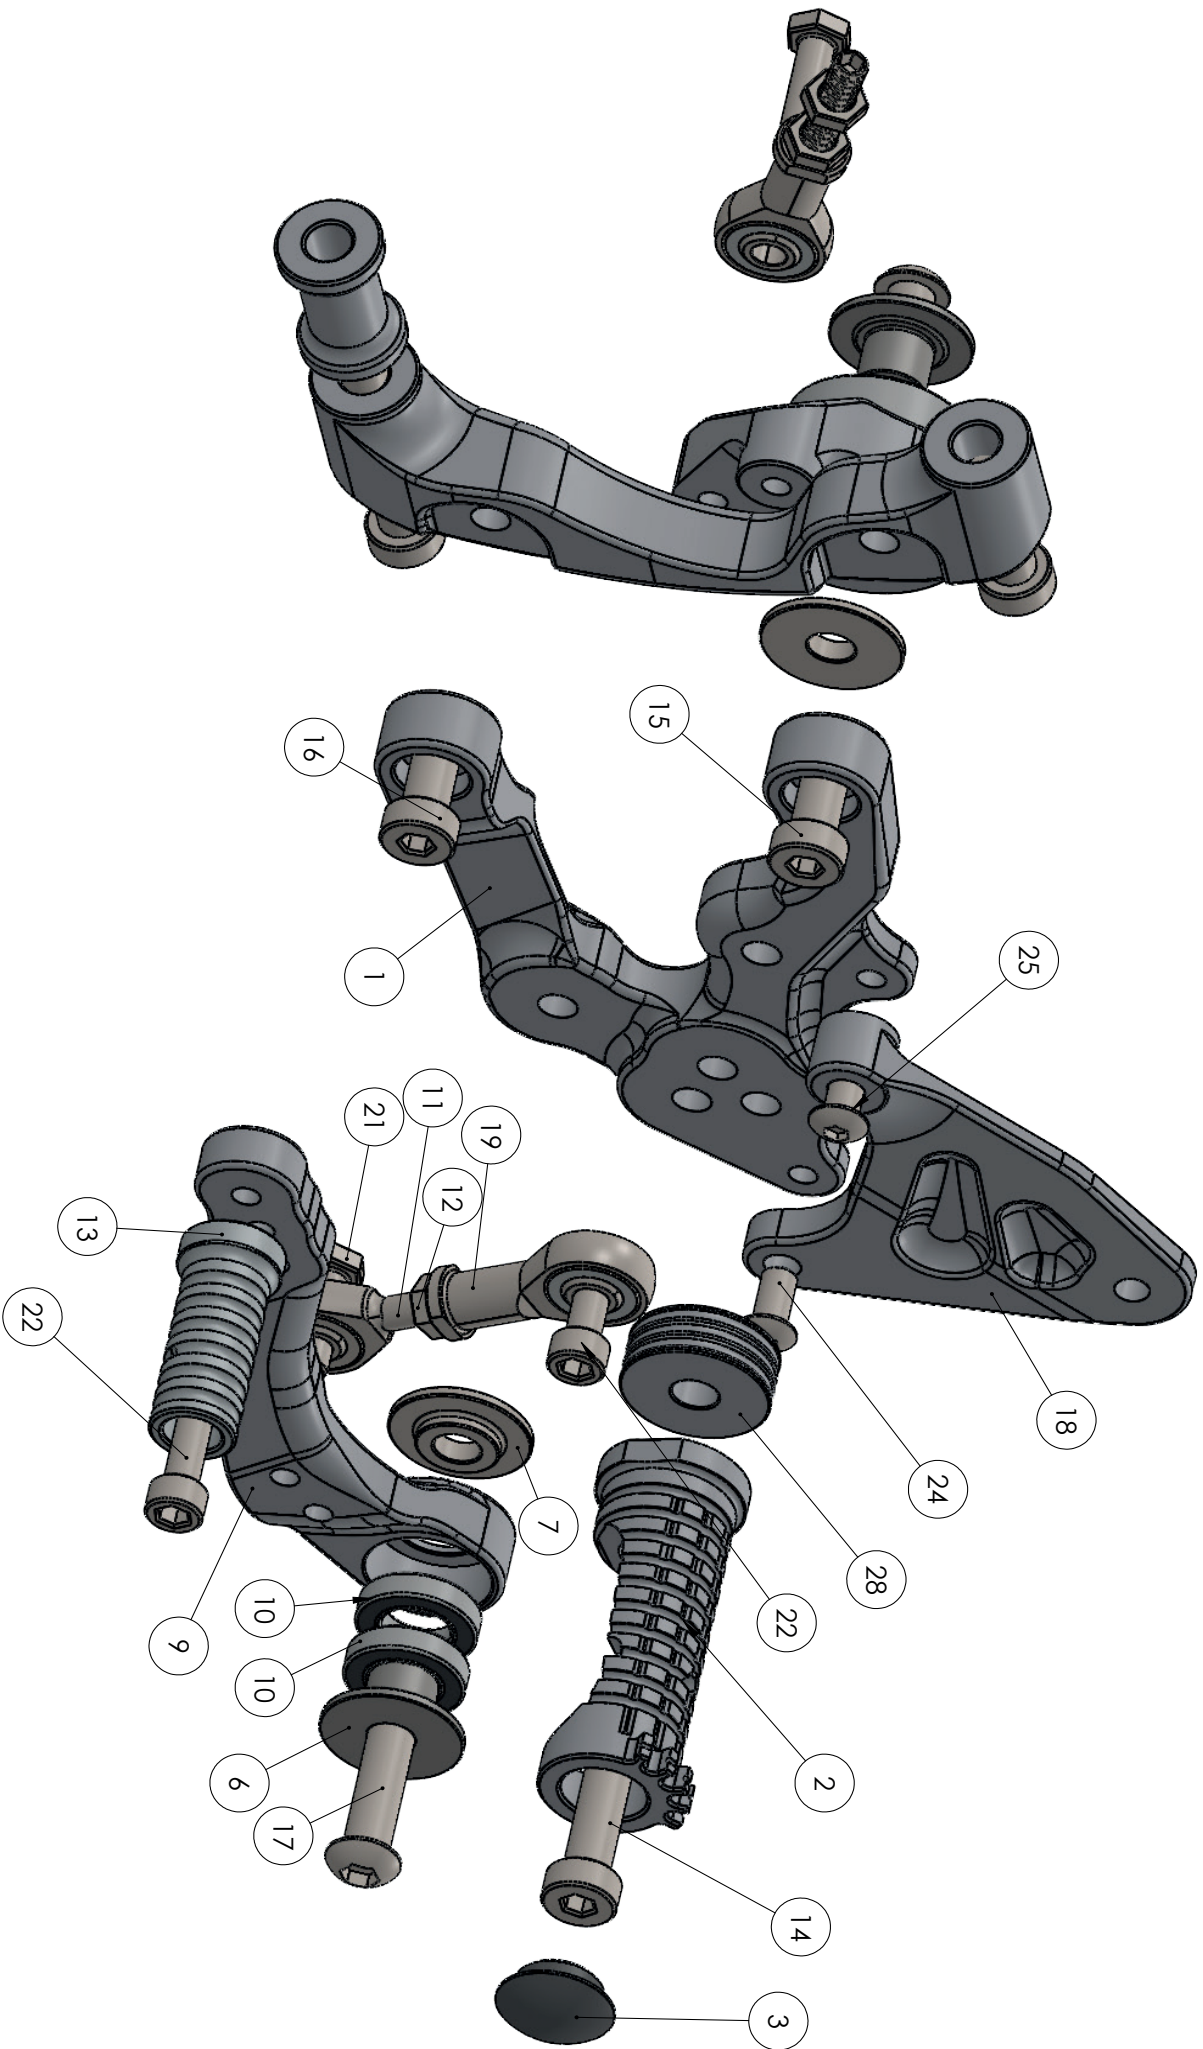

Num. articolo	Num. parte	Quantità
1	10.D252.2L - PIASTRA SX DUCATI V2 2022 REV1	1
2	11.27 - PEDALE A VITE ESTERNA	1
3	11.16 - TAPPO DERLIN PEDALE POGGIPIEDE	1
4	10.D252.58L - TRIPODE DUCATI V2 2022	1
5	11.U7.2 CUSCINETTO Ø32 H10	1
6	11.8.2 - BOCCOLA INOX ESTERNA LEVE SPIDER	2
7	11.8.1 - BOCCOLA INOX INTERNA LEVE SPIDER	2
8	10.D252.A1 - RINVIO CAMBIO DUCATI V2 2022	1
9	10.D252.61 - LEVA CAMBIO DUCATI V2 2022	1
10	11.U7.1 CUSCINETTO Ø21 H5	2
11	TSM1 6C - UNIBALL MASCHIO M6 SX	1
12	DADO M6 - 8.8 - UNI5589	3
13	11.U65L - PEDALINO CAMBIO	1
14	M8 x 35 TCEI	1
15	M8 x 16 TCEI	1
16	M8 x 20 TCEI	1
17	M8 X 30 TCBEI	2
18	parafacco sbk	1
19	11.39.3 - UNIBAL M6F	2
20	GRANO M6X40mm - 8.8 - UNI5923	1
21	M6X20 TESTA ESAGONALE - ISO 4017	2
22	M6 x 20 TCEI	2
23	10.D252.A3 BOCCOLA DISTANZIALE RADIALE	1
24	M6 X 12 TCBEI	1
25	M6 X 20 TCBEI	1
26	M8 x 30 TCEI	1
27	M8 x 60 TCEI	1
28	11.15.1 BOCCOLA DISTANZIALE PEDALE 10MM	1

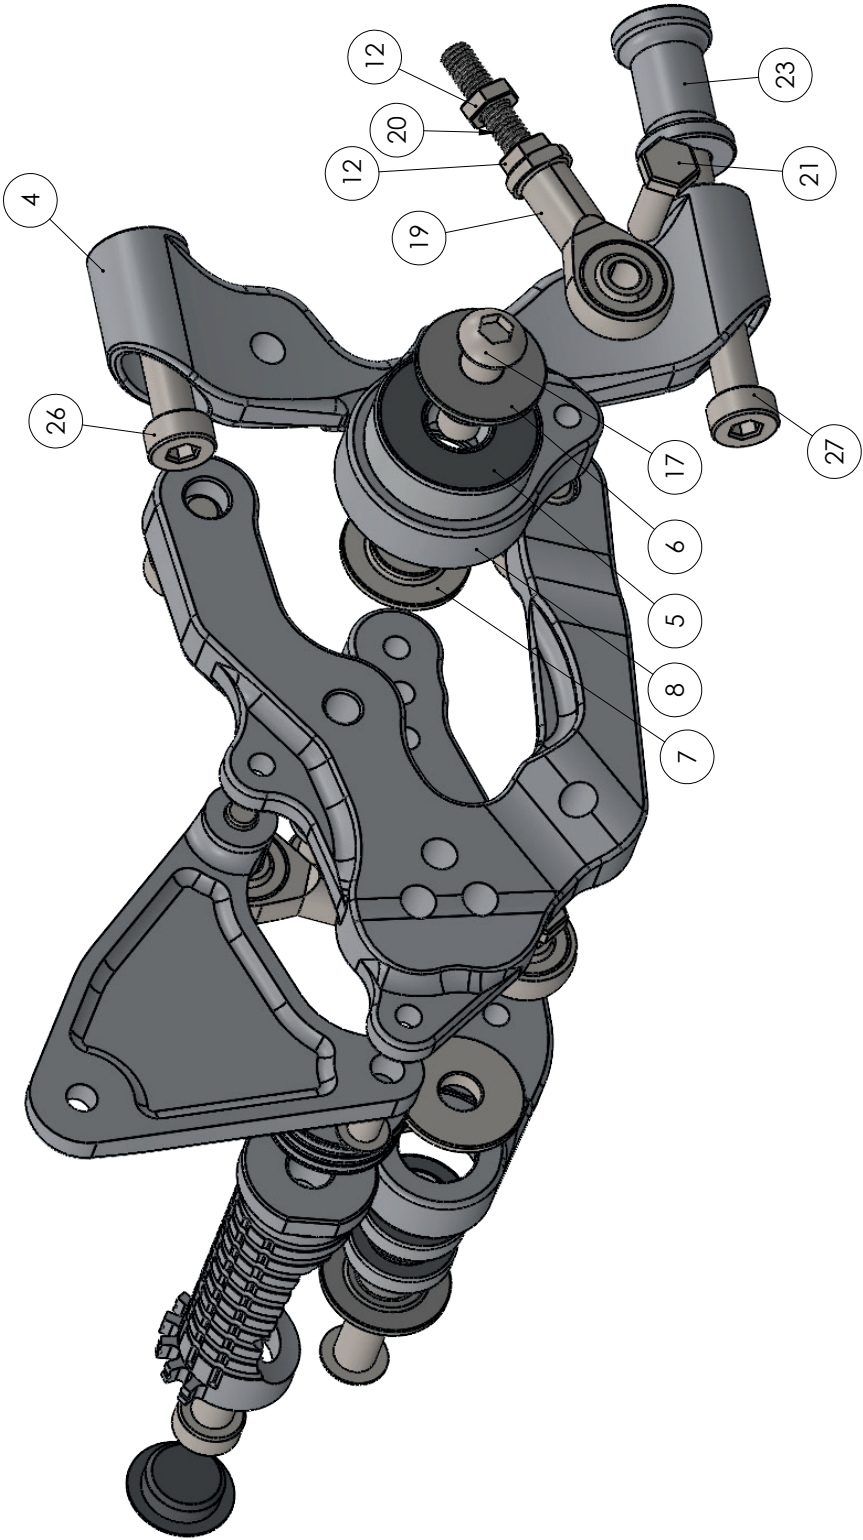

PERICOLO DANGER



PRIMA DELL'USO ASSICURARSI CHE TUTTE LE VITI SIANO
SERRATE CON CURA.
USARE FRENAFILETTI TIPO DEBOLE.

before use make sure that all screws are tightened with care. use
light strength threadlocker.



NECESSITA L'INTERVENTO DI PERSONALE PROFESSIONALE PER
TUTTI I PRODOTTI CHE NECESSITANO DI INSTALLAZIONE

the assistance of professional staff is necessary for all the parts which
require installation



I PRODOTTI SPIDER SONO DA USARE SOLO PER LE
COMPETIZIONI

all spider products for race use only



A SEGUITO DI QUALSIASI URTO E' OBBLIGATORIO
SOSTITUIRE LE PARTI INTERESSATE.

the assistance of professional staff is necessary for all the parts
which require installation

I PRODOTTI SPIDER SONO 100% MADE IN ITALY
MADE IN SPIDER

all spider are 100% made in italy - made in spider